
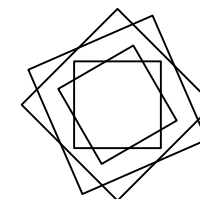


THANKS FOR WATCHING

Your feedback is invaluable to us and we would love to hear about your experience. Please take the time to leave us a review.

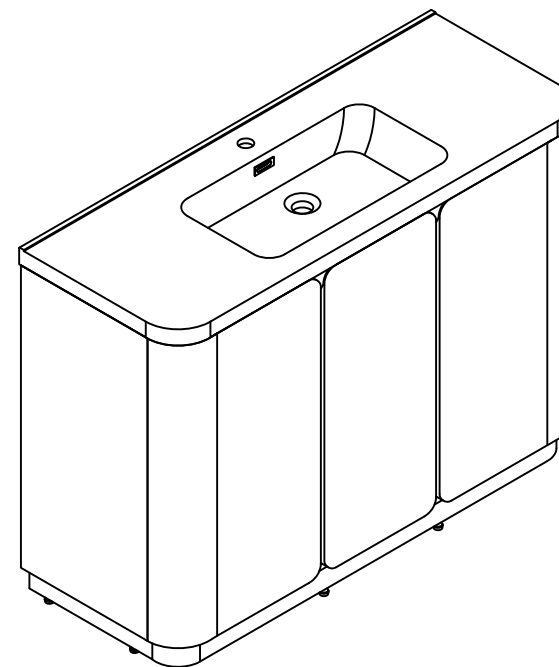


Thank you for shopping with us!


We encourage you to take a few minutes to go through this booklet. It contains important information on installation and care tips to keep your furniture looking as good as new.

Item NO.:BV H12548


Hardware

NO.	Draw	QTY	NO.	Draw	QTY
A	 Screws Ø4x14mm	64	I	 Hinges (Internal hiding)	4
B	 Two-in-one connector	52	J	 Hinges (Half cover)	2
C	 Two-in-one connector	52	K	 Screws Ø4x25mm	11
D	 Wood plug	13	L	 Adjustable feet	6
E	 Plastic anchor (Ø10mm)	2	M	 Movable laminate support	4
F	 Screws for fix on the wall	2	N	 Anti-collision gasket	6
G	 Bracket (53x70x44mm)	2	O	 Screwdriver	1
H	 Bracket (19x19x35mm)	4			

Recommended tools




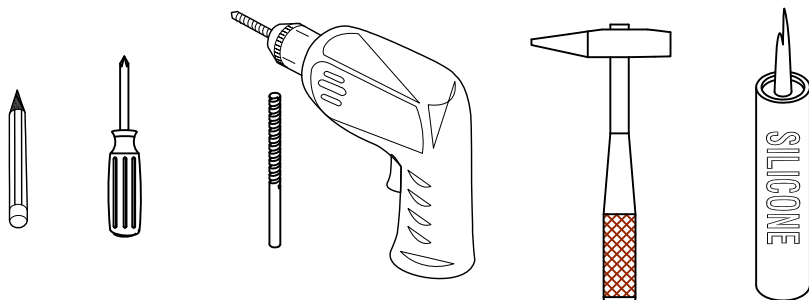


Dimensions

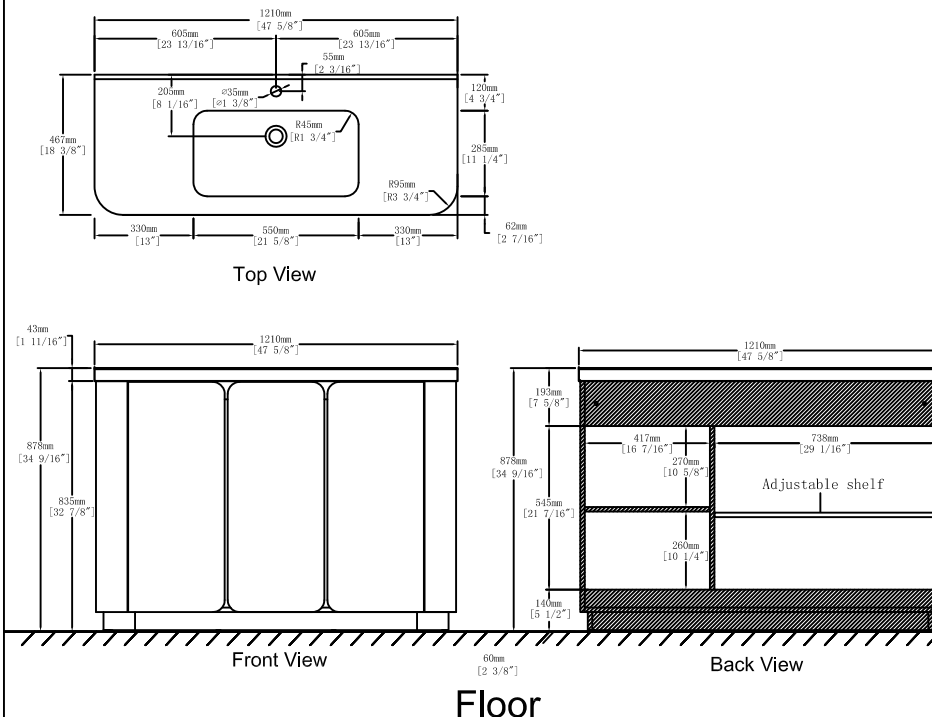


CARE CLEANING AND MAINTENANCE


1. Dust regularly with a soft , dry cloth.
2. Avoid the use of all chemicals household cleaners, abrasives, or cleaners that contain lemon, vinegar, or other acids that may damage the finish.
3. Excessive exposure to sunlight and extreme changes in temperature and moisture can damage wood furniture.
4. The sink is fragile, please pay attention to maintaining its appearance.
5. Do not place hot appliances, such as curling irons and hot hair dryers directly on the countertop. Wipe spills immediately.

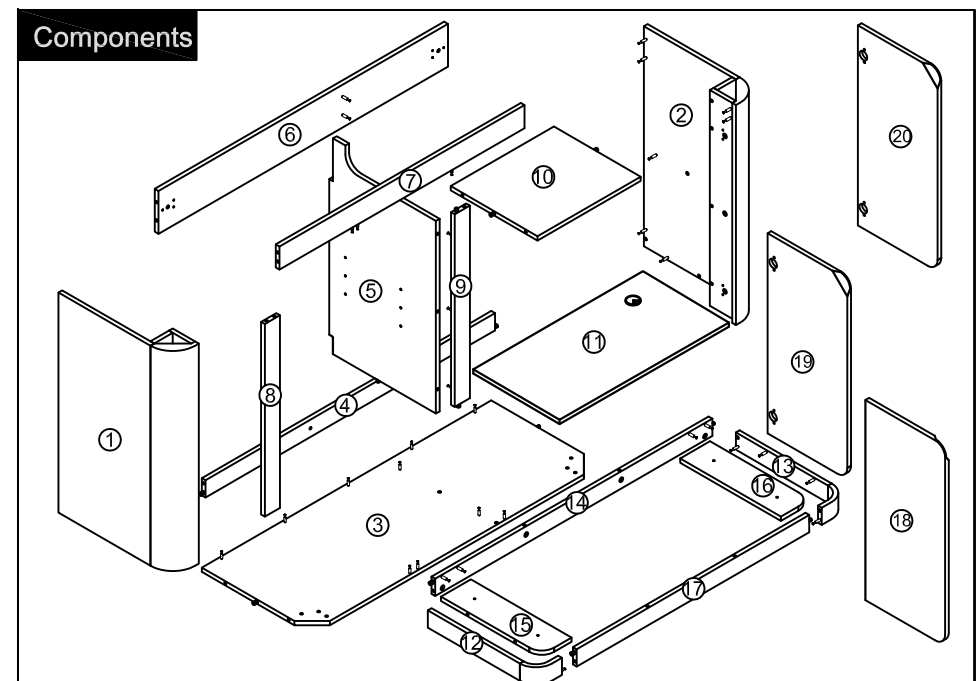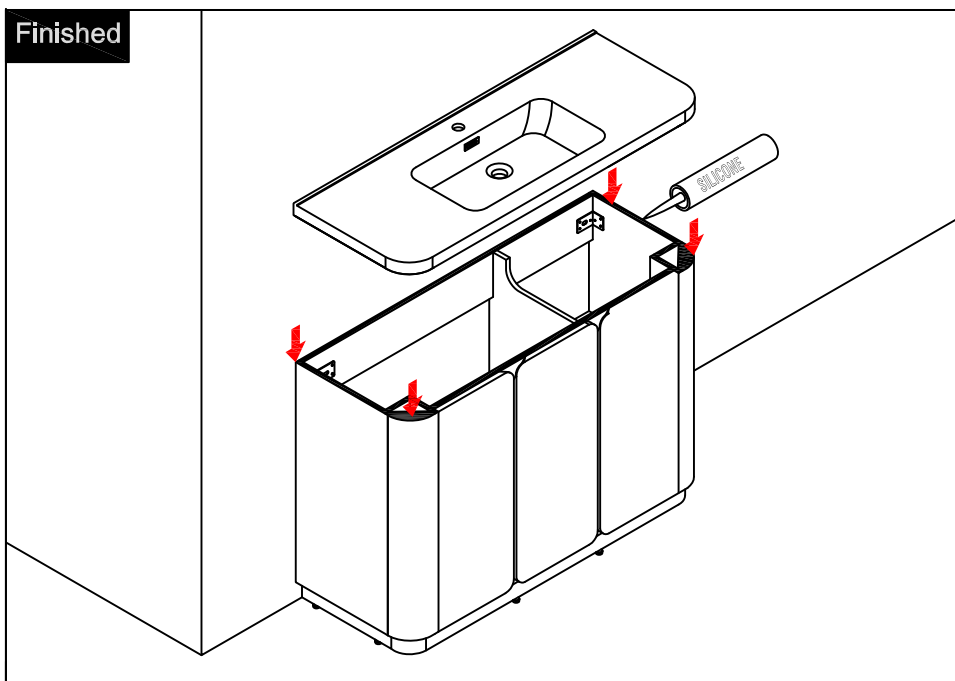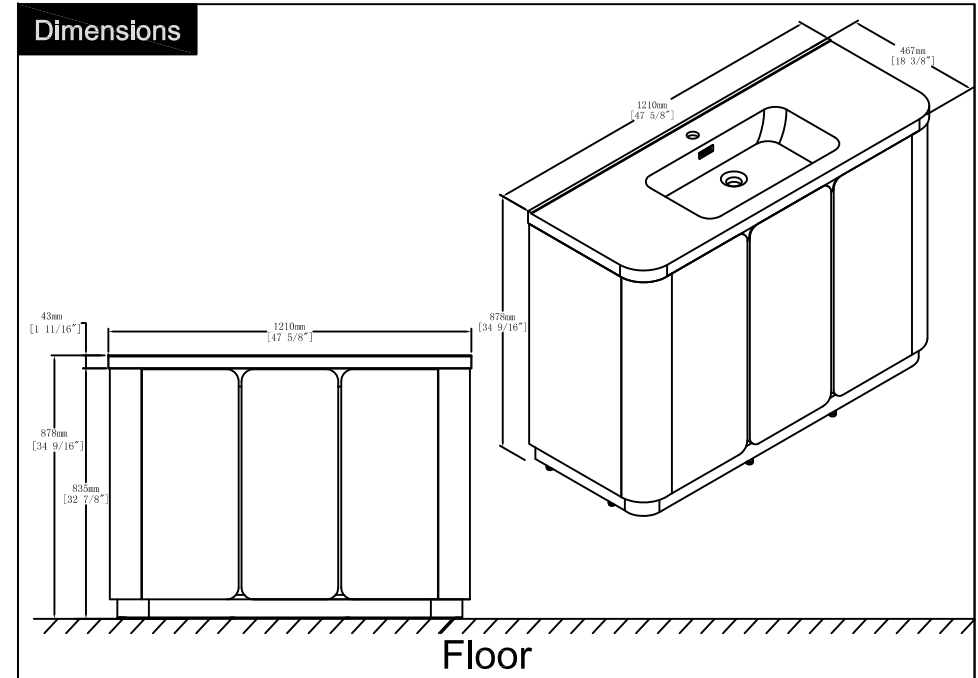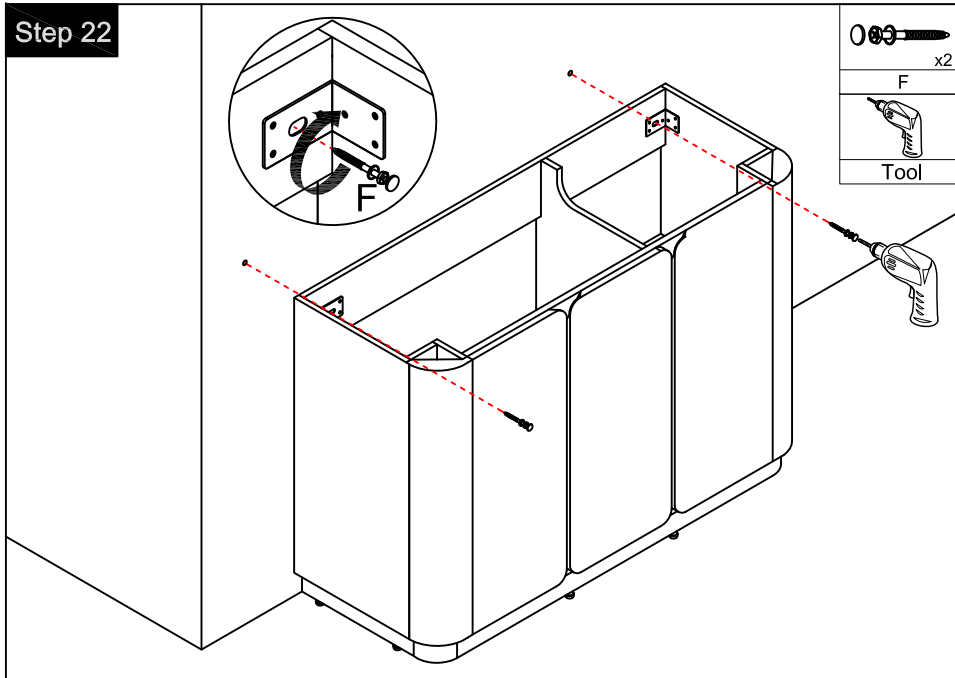


Step 1

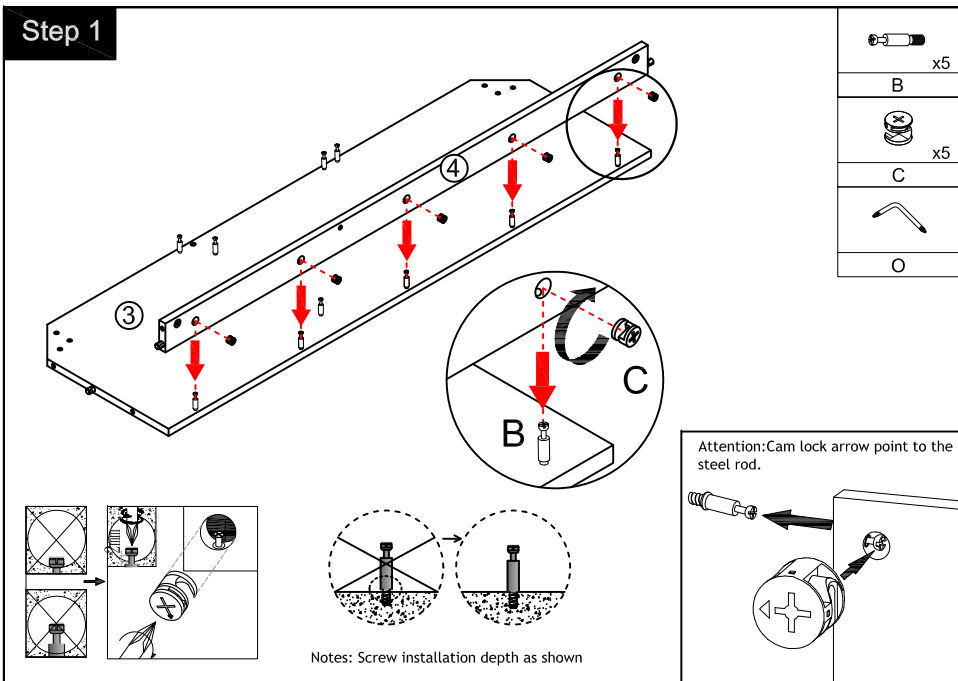


Step 2

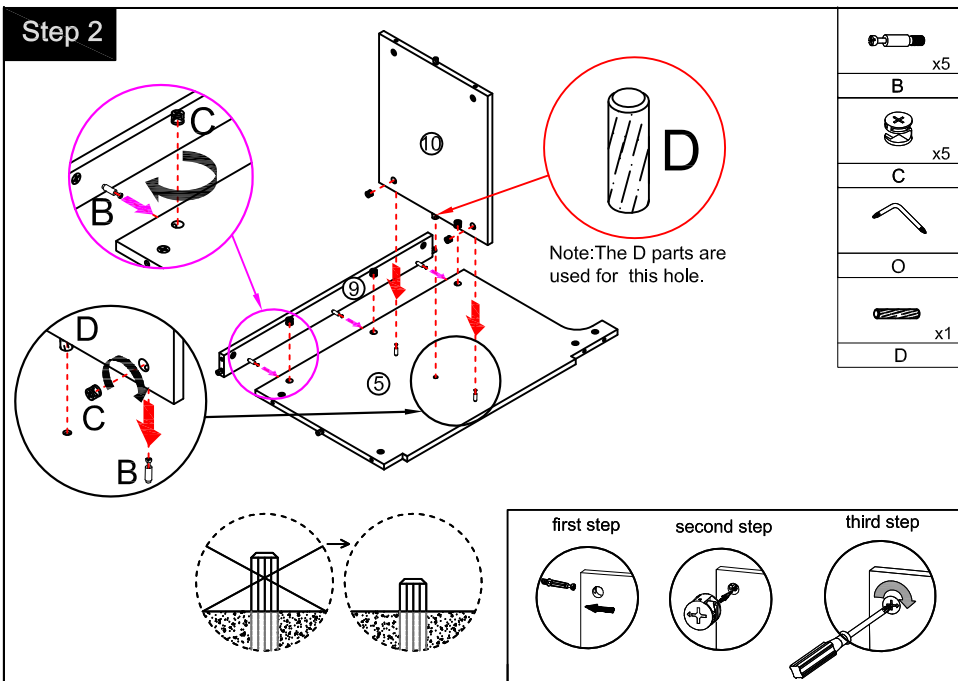


Step 19

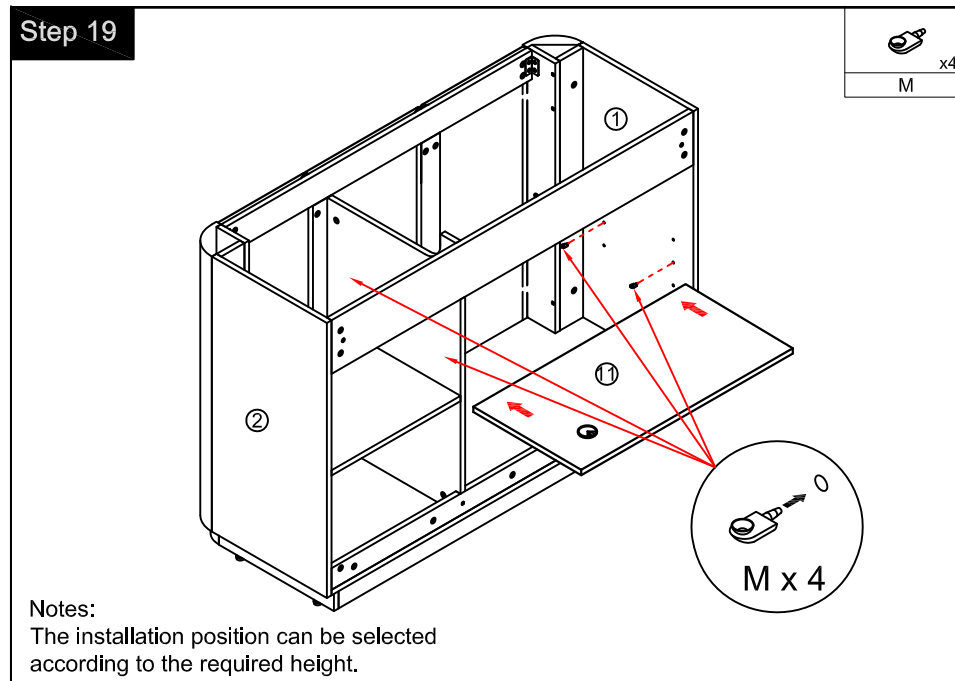


Step 20

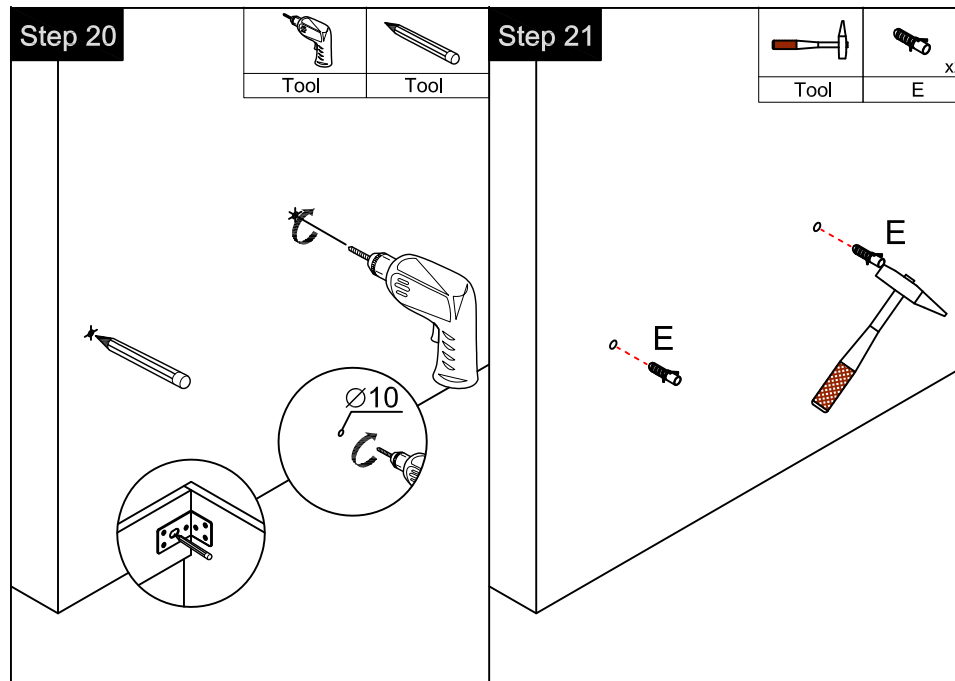


Step 21

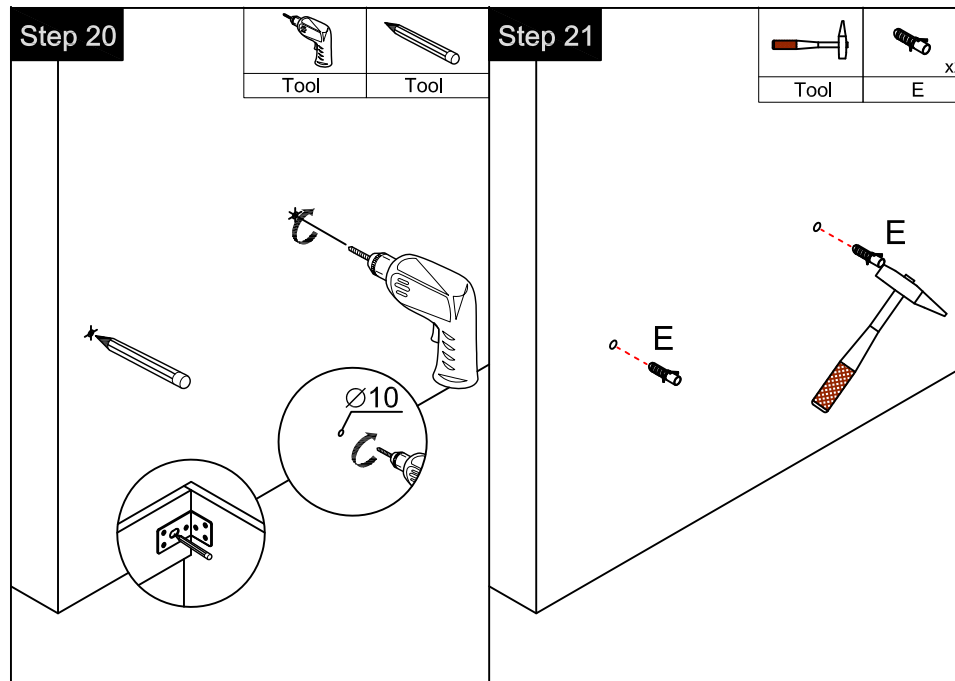


Step 17

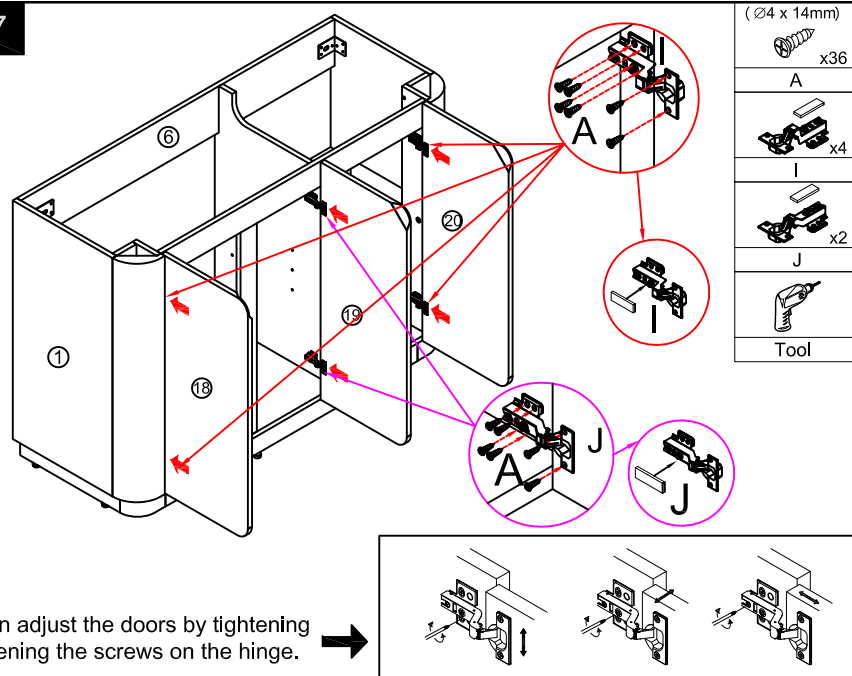


Step 18




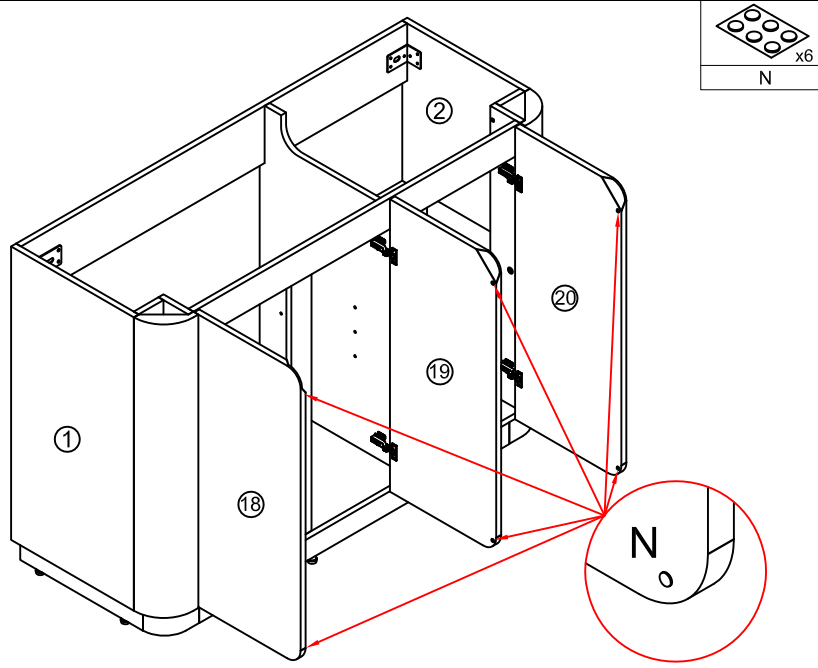


Step 3

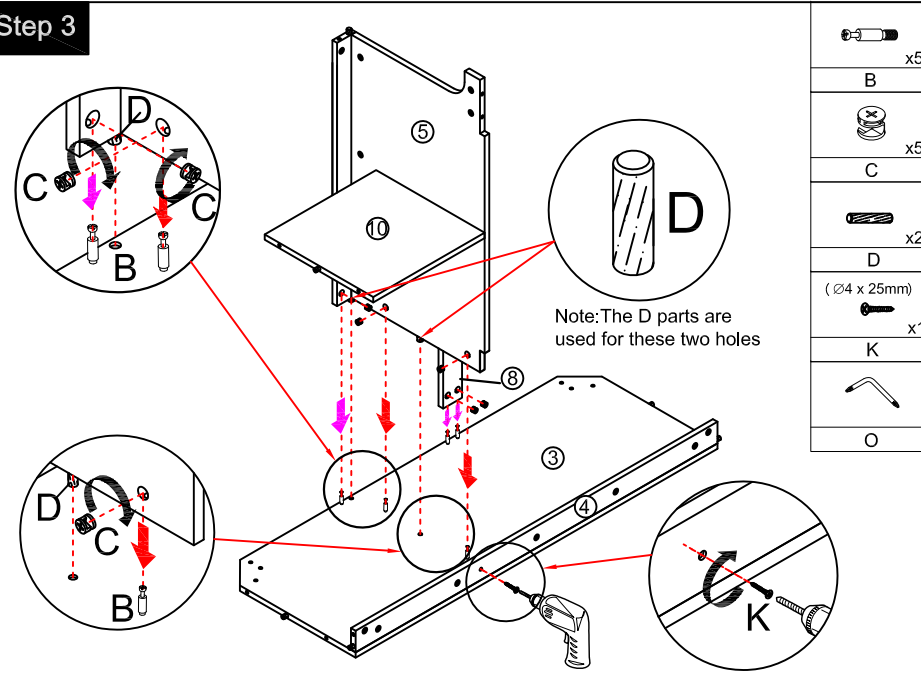


Step 4

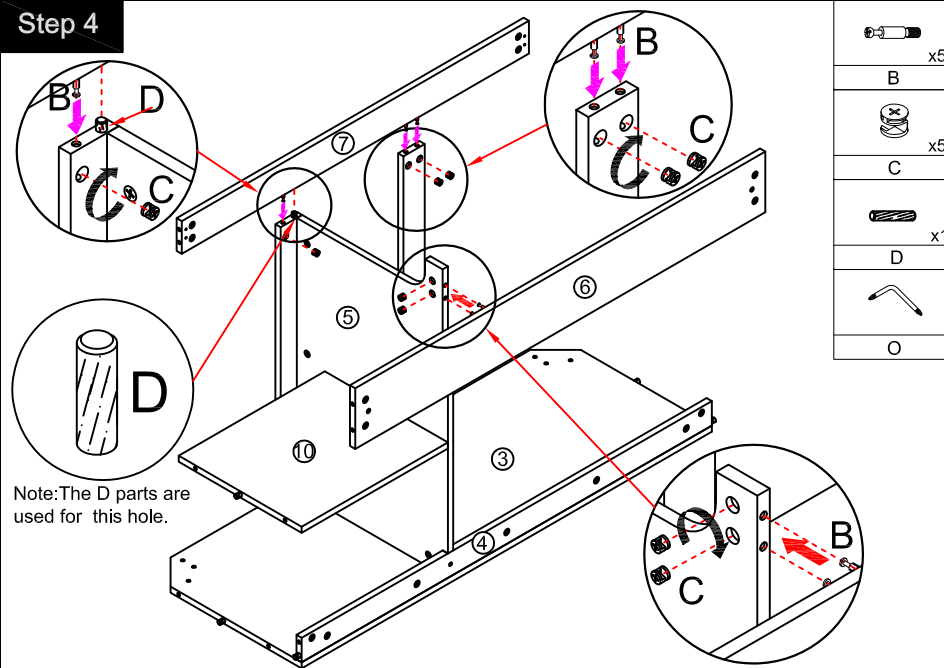


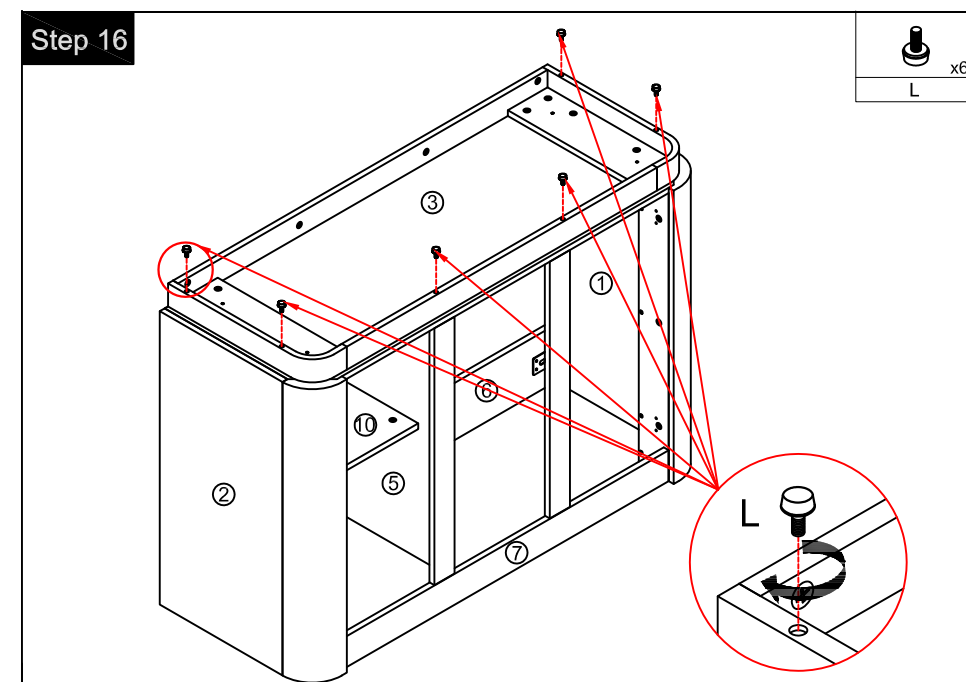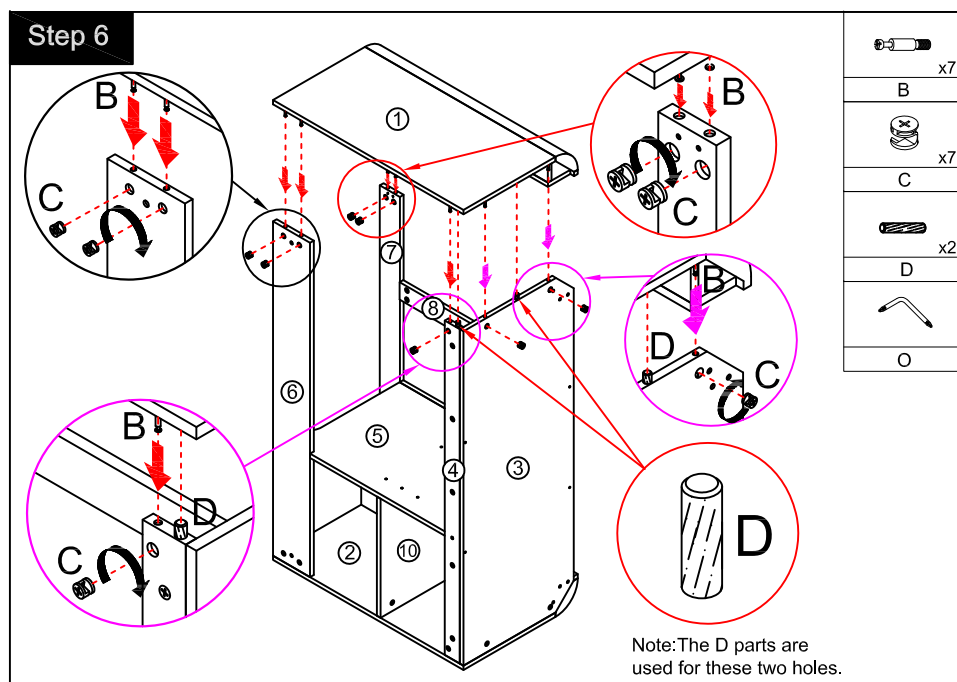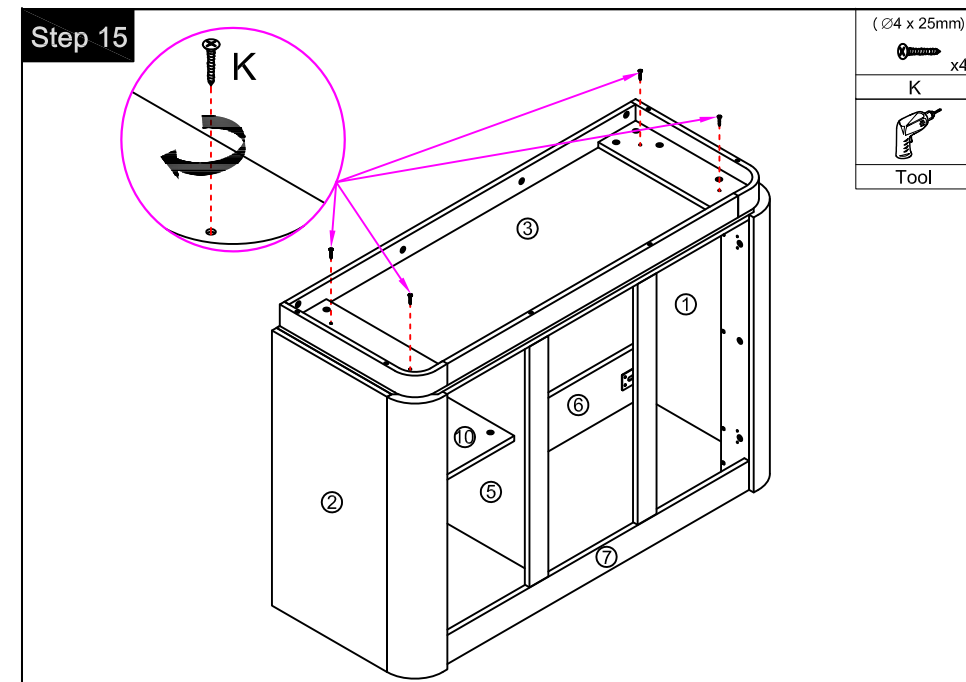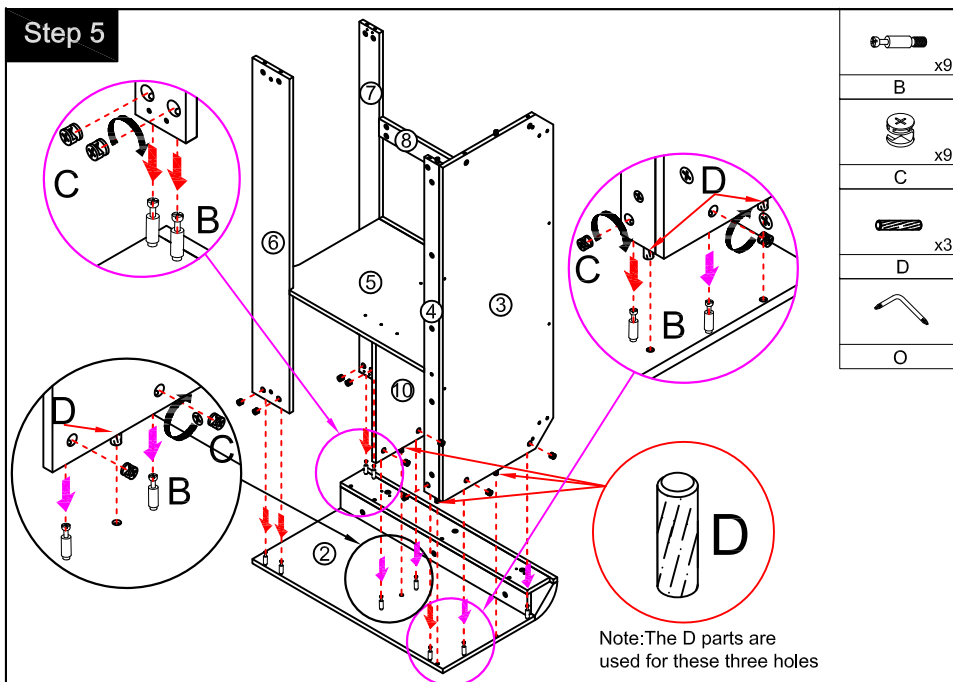


Step 13

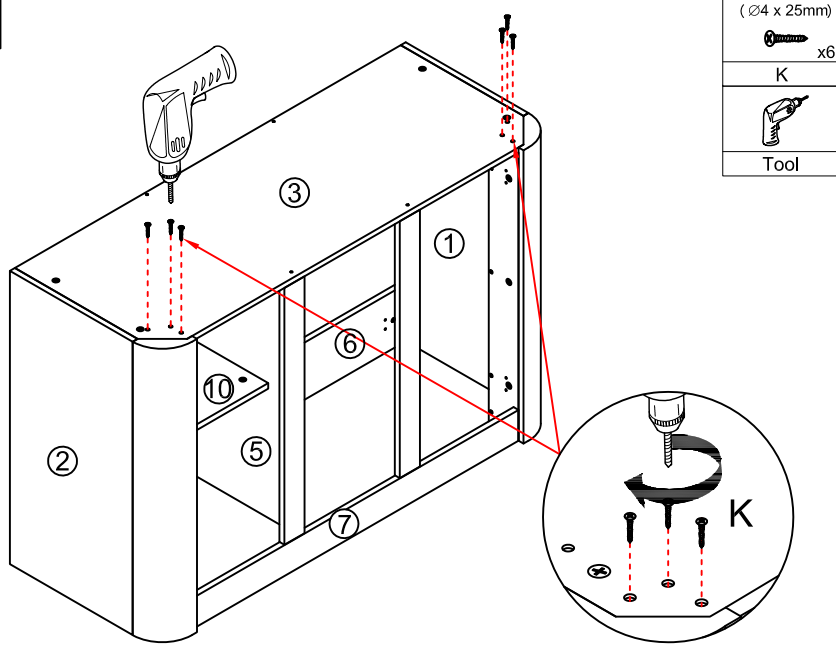


Step 7

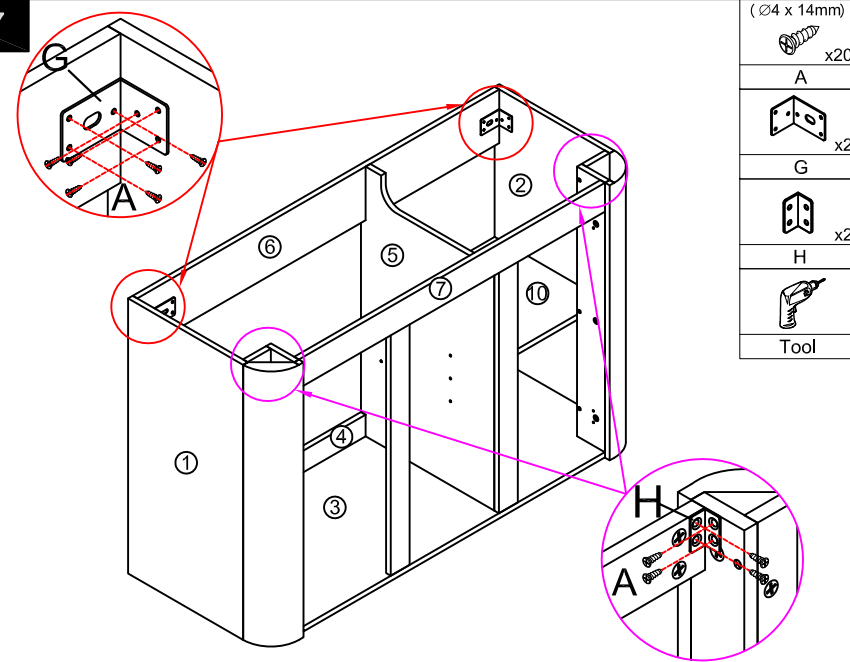


Step 14

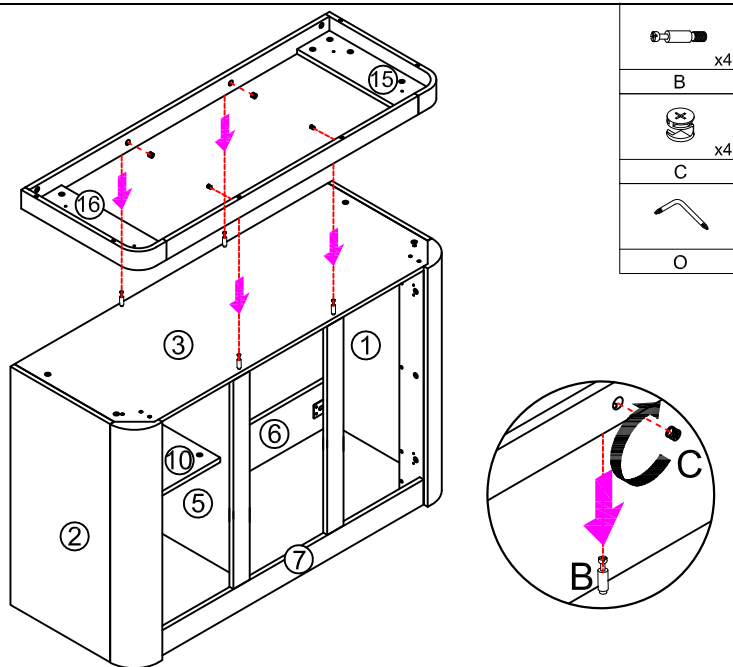

Step 8

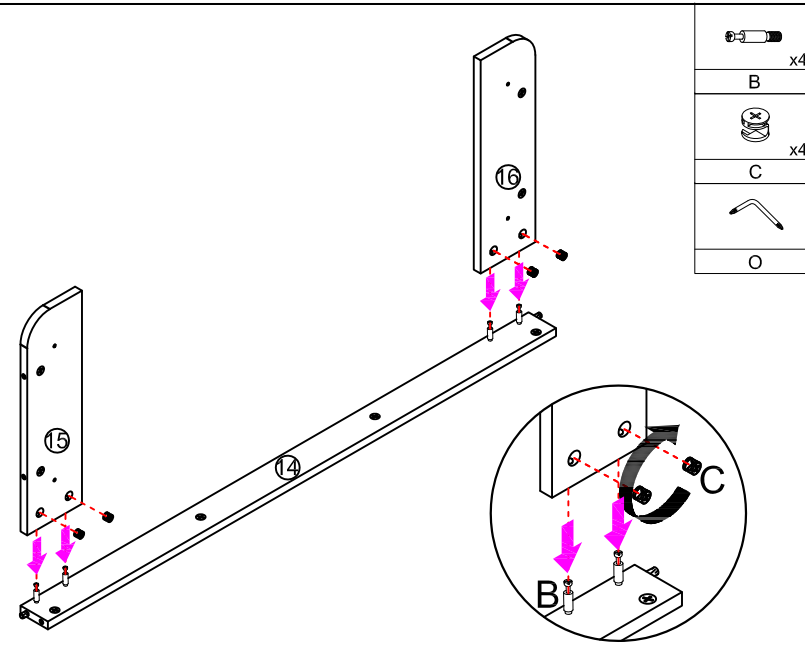


Step 9

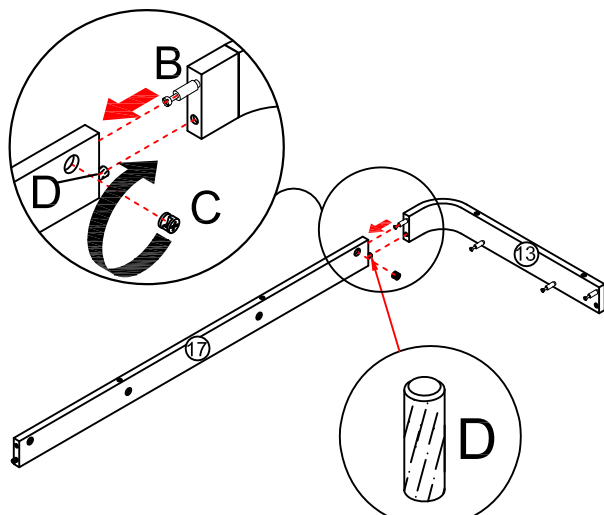

Note: The D parts are used for these this hole.


	x1
B	
	x1
C	
	x1
D	
O	

Step 11

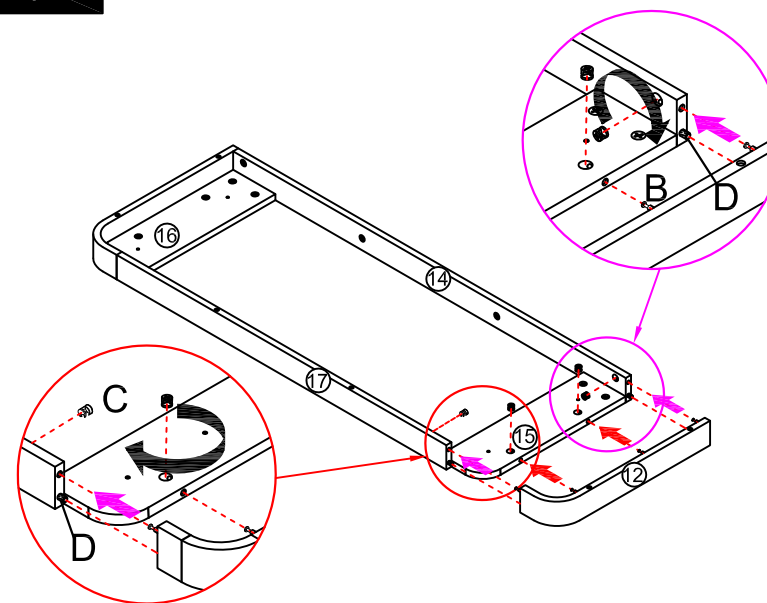

	x4
B	
	x4
C	
	x2
D	
O	


Step 10

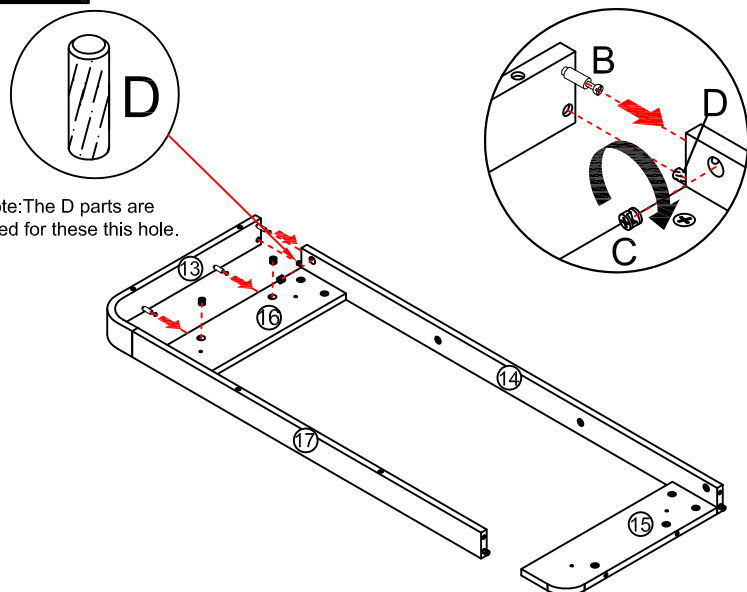

Note: The D parts are used for these this hole.

	x3
B	
	x3
C	
	x1
D	
O	

Step 12

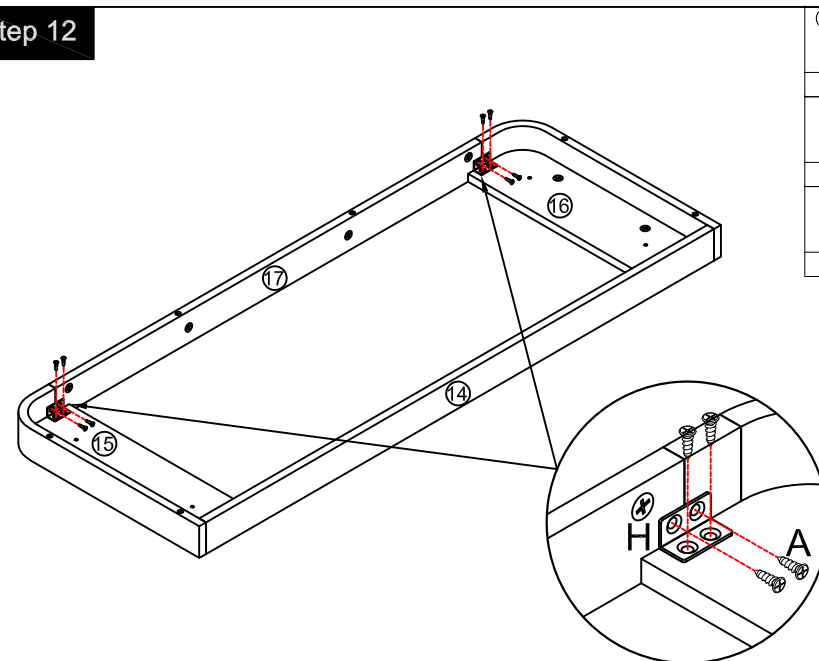

	x8
A	
	x2
H	
	Tool